



## Wi-Fi Alexa Speaker

### PWF1002 User Manual



#### Connecting to the Speaker


##### Connecting with the Polaroid Wi-Fi App

1. Search for the **Polaroid Wi-Fi App** on the **Google Play Store** (Android devices) or **App Store** (iOS devices). Download and install.
  2. Open the Wi-Fi app and tap the **Add Device** button. Enter the Wi-Fi password for the network you are connected to and tap the **Connect** button.
  3. Press and hold the [ M ] button until you hear a voice from the speaker "Connecting to your network, this may take one to three minutes." Tap **Next**, the speaker will finish connecting.
- While the speaker is in Wi-Fi mode, the LED indicator will turn solid **WHITE**.


##### Connecting with the Auxiliary Cable

Attach one end of the supplied 3.5mm auxiliary cable to the AUX jack on the speaker. The speaker will automatically switch to auxiliary input mode. Attach the other end to the headphone jack of your device.

#### In the Box

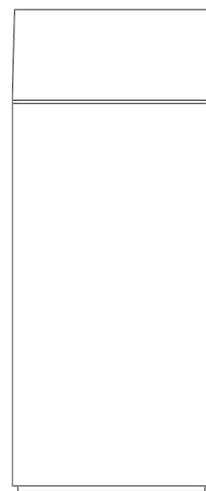

Wi-Fi Speaker

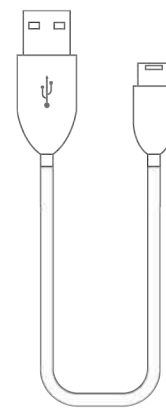

Micro-USB  
Charging Cable

#### Connecting to the Speaker (cont'd)

##### Pairing with Bluetooth

1. Press the [ M ] button to switch to Bluetooth mode. A voice will be heard and the speaker lights will flash **BLUE**.
2. Set your mobile device to search for Bluetooth devices. When your mobile device finds the speaker, select **PWF1002** from the list of found devices.
3. After a successful pairing, a tone will be heard indicating that the pairing was a success.

While the speaker is in Bluetooth mode, the LED indicator will turn solid **BLUE**.




If a previously paired device is in range when the speaker is turned on, the speaker will connect to it automatically.

#### Location of Controls


##### (Top of Speaker)

1. [ ] Button: Mute/unmute Alexa voice activation
2. [ ] Button: Decrease volume
3. [ M ] Button: Change input mode
4. LED Indicator
5. [ ] Button:  
(Long Press) Power speaker ON/OFF  
(Quick Press) Play/pause music
6. [ + ] Button: Increase volume
7. [ ] Button: Alexa activation

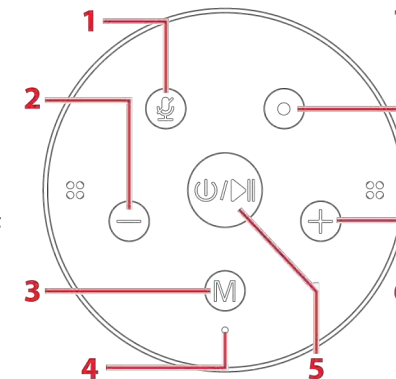

##### (Side of Speaker)

8. 3.5mm Auxiliary Jack
9. Charging LED Indicator
10. Micro-USB Charging Port

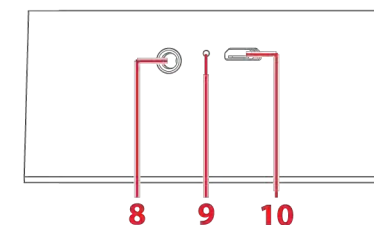

#### Using the Speaker



Make sure you charge your speaker for at least 3 - 4 hours before using it for the first time.

##### Powering ON/OFF

- Long press the [ ] button to power the speaker ON or OFF.

##### Changing Input Modes

- Press the [ M ] button to change between Wi-Fi, Bluetooth, and Auxiliary input modes.

##### Adjusting Volume

- Press the [ ] and [ + ] buttons to adjust volume or use the controls on your paired device or in-app controls.

##### Playing Music

To play music with the speaker, please refer to the **Connecting to the Speaker** section of this user guide. Music can be played via the **Polaroid Wi-Fi** mobile app, pairing your device via Bluetooth, or by connecting a 3.5mm auxiliary cable.

## Using the Speaker with Alexa

The **PWF1002** has extensive integration with Amazon Alexa. To use the speaker with Alexa you must login (or create an Amazon account if you do not have one) at ***Alexa.Amazon.com***, then log in via the **Polaroid Wi-Fi** app.

Once logged in, you will be able to use Alexa functions with the speaker. Please consult Amazon's Alexa website for tutorials on how to use Alexa and adjust your Alexa settings.

### Using the Speaker with Alexa

Once you have logged into and set up Alexa through the **Polaroid Wi-Fi** app, you may interact with Alexa by speaking aloud and starting your sentences with "Alexa." You may ask questions such as "Alexa, what is the weather?" or make requests, such as "Alexa, play some music" or "Alexa set a reminder."

After it is set up, Alexa can be activated with your voice or by pressing the [ ● ] button for immediate access.

- To mute/unmute voice access press the [ 🎧 ] button.
- Press the [ ● ] button to immediately access Alexa without voice activation.

## Legal Information

### READ THIS CAREFULLY AND SAVE FOR FUTURE REFERENCE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### WARNING Li-ion Battery Inside

This product is fitted with a Li-ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).



The crossed-out garbage bin symbol means that you must not dispose of this product together with unsorted household waste.


### Rain/Moisture Warning

- Do not expose the unit to extreme temperatures (heat or cold), open flames, humid conditions, or wet conditions.
- Do not submerge in water.
- Do not open this product or attempt to repair the unit yourself should it not be working.

## Charging the Speaker

To charge the speaker attach the small end of the supplied micro-USB cable to the USB charging port on the side of the speaker. Attach the large end to the USB port on a computer, USB charging device, or **5V USB adapter**.

The LED indicator will turn **RED** while charging and turn OFF when fully charged.

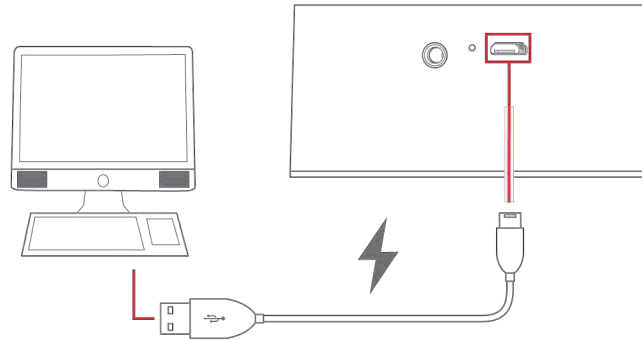

## Warranty Information

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

### TO OBTAIN WARRANTY SERVICE:

- Call the number below or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.


The shipping address of the authorized service center is:

**AIT, Inc.**  
**Customer Service Dept. 36**  
**c/o Southern Telecom**  
**400 Kennedy Drive**  
**Sayreville NJ 08872**

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

### For further customer service:

 **SouthernTelecom.com**  
Click on **Product Support**

 **1 - 877 - 768 -8481**  
Monday - Friday, 8AM - 10PM (EST)

## Using the Speaker with Spotify

### Listen Outloud with Spotify Connect

Once the PWF1001 has been connected to your Wi-Fi network, Spotify can be used with the speaker via the official Spotify mobile app.

1. Connect your **Polaroid Wi-Fi Speaker** to your Wi-Fi network (as described in the **Connecting the Speaker** - *Connecting with the Polaroid Wi-Fi App* section of this user manual).
2. Open up the Spotify app on your phone, tablet, or laptop using the same Wi-Fi network.
3. Play a song and select **Devices Available**.
4. Select your **Polaroid Wi-Fi Speaker** and start listening.



PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

 
Polaroid, Polaroid & Pixel, Polaroid Color Spectrum, and Polaroid Classic Border Logo are trademarks of PLR, IP Holdings, LLC, used under license.

Android, Google and the Google Play store logo are registered trademarks of Google Inc., used with permission.

Apple, iOS, and the App Store are registered trademarks of Apple Inc., registered in the U.S. and other countries.

The Spotify Software is subject to third party licenses found here: <http://www.spotify.com/connect/third-party-licenses>

All other trademarks and trade names are those of their respective owners.



Instantly recognizable. Instantly reassuring. The Polaroid Classic Border and Polaroid Color Spectrum logos let you know you've purchased a product that exemplifies the best qualities of our brand and that contribute to our rich heritage of quality and innovation.