

Soundcore Flare

蓝牙音箱

User's manual



Model No.: A3161
51005000906 V01

Bedienungsanleitung | Guide d'Utilisation | Guida d'Utilizzo
Manual de Instrucciones | Manual de Instruções | 取扱説明書
用户手册 | 사용자 메뉴얼 | Начальное руководство | دليل الترحيب


EN Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Soundcore Flare can be immersed in water up to 1m for up to 30 minutes.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

What's Included

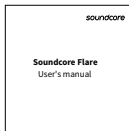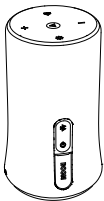




At a Glance

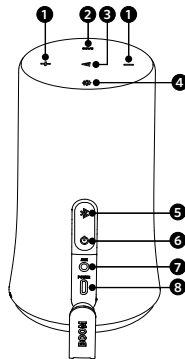


- | | |
|--|---------------------------------|
| 1 Volume Buttons for Volume Control | 5 Bluetooth Button |
| 2 Bass Up Button | 6 Power Button |
| 3 Multi-function Button | 7 3.5mm Audio Input Port |
| 4 Light Effects Button | 8 micro USB Port |

EN Using Your Soundcore Flare

  1. Turn on / off

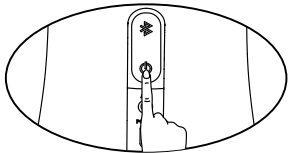

a. Bluetooth mode

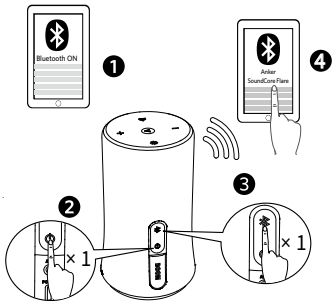

Flashing White

Bluetooth Pairing Mode



Solid White

Connected to a device



Enter True Wireless Stereo Pairing Mode / Disconnect True Wireless Stereo

Enter True Wireless Stereo Pairing Mode / Disconnect True Wireless Stereo



Double Flashing White


True Wireless Stereo Pairing Mode



Solid White

Connected to True Wireless Stereo

Note: Once connected, the status indicator will stay white for 5 seconds.

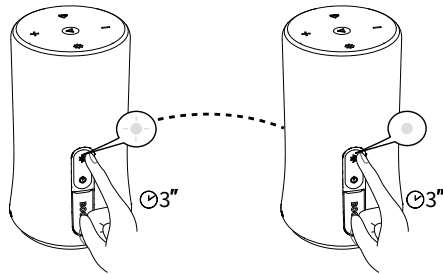



With True Wireless Stereo technology, you can pair your Soundcore Flare with another Bluetooth speaker (Soundcore Flare) to explore the best sound effects with left and right sound channels separated on both speakers.



Play / Pause



Play Next Song



Play Previous Song



Press to turn Bass Up on and off



Press and hold for 2 seconds to reset EQ settings



Answer Call / End Call



Reject Call / Switch between a call on hold and an active call



End current call and answer incoming call / End current call and switch to call on hold



Switch audio source between Speaker and Phone



Put current call on hold and answer incoming call



Activate Siri / Other Voice Control Software



Volume Up / Down



Solid White

On a Call



Flashing White

Incoming Call



Press and hold for 2 seconds to turn Light Effects Off



Press to turn Light Effects On




Press once to switch between Light Effect modes



When turned on, Soundcore Flare will automatically connect to the last connected device if available. If not, press the Bluetooth pairing button to activate pairing mode.

To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.

Having connection problems? Remove Soundcore Flare from your device's Bluetooth history and ensure it's less than 3 feet away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.

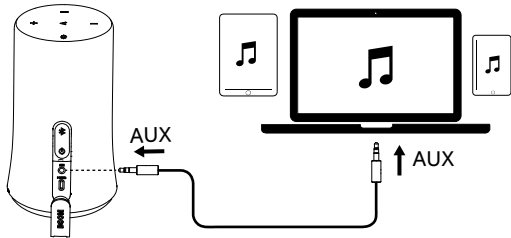


* SoundLine AUX cable sold separately.



Plugging in an audio cable will automatically switch to AUX mode. When using AUX mode, control audio playback via the connected device.

Charging your Soundcore Flare

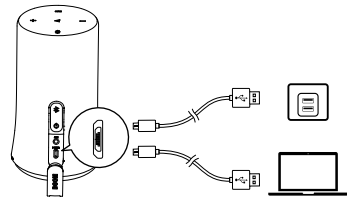

Slow Flashing Red

Low Battery



Solid Red

Charging

Off

Fully Charged



Use the included USB cable to charge your Soundcore Flare and make sure it is fully charged before its first use.

Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.

When not in use, store your speaker in a cool place.

EN Specifications



Specifications are subject to change without notice.

Input: 5 V $\overline{=}$ 2 A

Audio output: 6 W x 2

Battery capacity: 4400 mAh

Charging time: 3.5 hours

Play time (varies by volume level and music content): 12 hours

Size: 89 x 89 x 151 mm / 3.5 x 3.5 x 5.95 in

Weight (without packaging): 530 g / 18.7 oz

Bluetooth version: V4.2 + EDR

Range: 20 m / 66 ft

Soundcore App





- Light effect
- Update firmware
- Wave Equalizer
- Stereo or Boost mode
- Rename
- More




DE Sicherheitsinformationen

- Nicht fallenlassen.
- Nicht zerlegen.
- Soundcore Flare kann bis zu 30 Minuten lang in Wasser von bis zu einem Meter Tiefe eingetaucht sein.
- Extreme Temperaturen meiden.
- Das Produkt nicht bei Gewitter im Freien verwenden.
- Nur Original- oder zertifizierte Kabel verwenden.
- Weder scharfe Reinigungsmittel noch Öl verwenden.

Im Lieferumfang

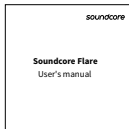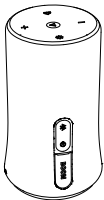

Auf einen Blick

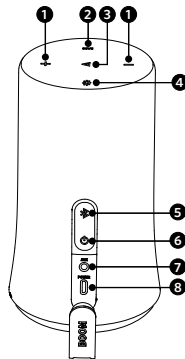


- 1 Lautstärkeregler
- 2 Bassverstärker-Taste
- 3 Multifunktionstaste
- 4 Lichteffekte-Taste


- 5 Bluetooth-Taste
- 6 Ein- / Aus-Taste
- 7 3,5-mm-Audioeingang
- 8 Mikro-USB-Anschluss

DE Verwendung Ihres Soundcore Flare

1. Ein- / Ausschalten

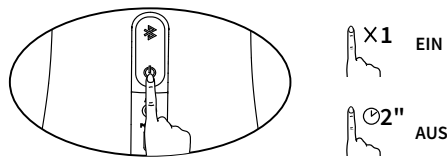

a. Bluetooth-Modus

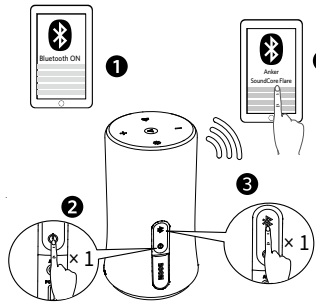

	Blinkt weiß	Bluetooth-Kopplungsmodus
	Leuchtet weiß	Mit einem Gerät verbunden
		True Wireless Stereo-Kopplungsmodus starten / True Wireless Stereo trennen
	Blinkt zweimal kurz hintereinander weiß	True Wireless Stereo-Kopplungsmodus
	Leuchtet weiß	Mit True Wireless Stereo verbunden Hinweis: Sobald die Verbindung hergestellt ist, leuchtet die Statusanzeige 5 Sekunden lang weiß.

