

Brentwood[®]

DIGITAL COFFEE MAKER



MODEL:TS-218B

120V~60Hz 900W

12 CUP DIGITAL COFFEE MAKER

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to prevent the risk of fire, electric shock, burns, or other injuries or damages.

• **Read all instructions before use.**

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock and injury to persons do not immerse cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect the appliance, turn any control to "off", then remove plug from wall outlet.
- Do not use this appliance for anything other than its intended use.
- Do not touch the keep warm plate when the coffee maker is on.
- Scalding may occur if the coffee-filling lid is removed during the brewing cycles.
- Never leave the empty carafe on the keep warm plate when the coffee maker is on. Otherwise the carafe is liable to crack.
- Do not set a hot container on a cold surface.
- Do not use a cracked container or a container having a loose or weakened handle.
- Do not clean container with cleansers, steel wool pads, or other abrasive material.
- To reduce the risk of fire or electric shock, do not remove the bottom cover on the appliance.
- The container is designed for use with this appliance. It must never be used on a range top.

Save These Instructions!

Additional Safeguards

This appliance is for **HOUSEHOLD USE ONLY**.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

EXTENSION CORDS

A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).


POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

FEATURES



1. Water Tank Lid
2. Coffee Filling Lid
3. Not Shown: a. Water Filter b. Filter Basket c. Permanent Filter
4. Housing
5. Water Level Indicator
6. Water Tank
7. Carafe Lid
8. Carafe
9. Contoured Handle
10. Warming Plate
11. Control Panel

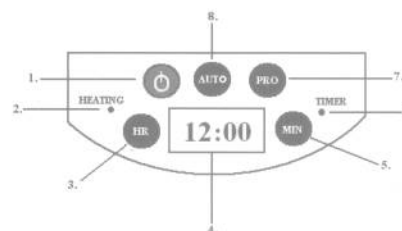

1. **Power Button**- Turns the appliance Off/ On
2. **Heating Indicator Light**- Indicates when the Appliance is Brewing
3. **Hour Button**- Sets Hours (time/program)
4. **LCD Display** - Shows real time/ Program Time
5. **Minute Button**- Sets Minutes (time/program)
6. **Timer On Indicator**- Indicates when the Appliance has a Timer On
7. **Program Button**- Sets and Saves Program
8. **Auto Button**- Starts Program Operation

OPERATION

Before first use

- Remove packaging materials, labels and stickers from coffee maker.
- Clean coffee maker thoroughly before using for the first time
- Insert the charcoal filter into the water filter holder

NOTE: To clear the coffee maker of any residues fill it to the maximum level mark with fresh water and run brew cycle. Repeat procedure at least once.

Using the coffee maker

The coffee maker is only for brewing coffee.

- Open coffee-filling lid . Place filter basket into coffee maker so that the arrow markers on filter basket line up with arrow on coffee maker
- Insert the permanent filter or a paper filter into the filter basket Do not use the permanent filter with a paper filter as water will not flow through the filter basket correctly.
- According to the chart below, use the measuring spoon to add ground coffee into the permanent filter Amounts can be adjusted according to taste Press the front of the coffee-filling lid down until it locks in place.

To Brew	Ground Coffee
12 cups	9 spoons
10 cups	7 spoons
8 cups	5.5 spoons
6 cups	5 spoons
4 cups	3 spoons

1 cup=5 oz, 1 spoon=5 g ground coffee

• Open water tank lid . Fill carafe with desired amount of water. Check the water level indicator on the coffee maker. Pour water into the water tank Close water tank lid . Place carafe on keep warm plate .
NOTE: Splash guard allows you to fill water tank without spills and drips

• Insert power plug into a standard 120 V AC wall outlet . flashes on the LCD display. Setting time
• Press hr and hold for 3 seconds . The LCD display flashes. Press again to set hours.
• Press min and hold for 3 seconds. The LCD display flashes. Press again to set minutes.

NOTE: The time setting will be deleted if you unplug coffee maker from the outlet and do not plug back in within 14 .

STARTING BREWING

• Press once to start the manual brewing cycle. lights up. The brewing begins.

NOTE: To interrupt brewing, press once more.

• When buzzer sounds twice, the brewing cycle is complete. The keep warm cycle starts. Remove carafe to serve coffee . Return it to the keep warm plate to keep it warm. CAUTION: Do not touch keep warm plate ! Do not open coffee-filling lid during brewing! Risk of burn injury.

CAUTION!

• After the brew cycle is complete, wait a minimum of 5 minutes before opening the coffee-filling lid . Steam builds up under the coffee-filling lid . There is a risk of injury from hot steam.

EXTRA FEATURES:

• The drip stop valve function allows you to remove carafe during the brewing cycle to serve a cup of coffee (replace carafe within 30 seconds) .

• Water filter holder with charcoal filter .

NOTE: Program setting is only possible when clock time is set.

• Press prog once and operate hr and min buttons (Setting time) to set the program start time.

• Press prog or auto to save settings.

NOTE: The program will be stored automatically if no button is operated for 3 seconds and the clock time is displayed.

• To change or view program settings press prog again. The program start time appears on the LCD display (if activated in the program) for 3 seconds. Press hr and min to modify the program (Setting time).

• Press auto to activate the program. auto button lights up and the LCD display shows program start time for 2 seconds. Brewing will start after the program start time is reached.

NOTE: Program activation is possible if is turned off.

NOTE: When program function is running, the auto button light will go out and does not illuminate - even if activated. You can deactivate the program before it starts by pressing auto again.

NOTE: Program function will be deleted if you unplug the coffee maker from the outlet for more than 14 seconds.

CLEANING

Proper maintenance will ensure years of service from your appliance. Clean the appliance after every use. This appliance contains no user serviceable parts and requires little maintenance. Leave servicing or repairs to a qualified personnel.

WARNING: Unplug the appliance and allow to cool before cleaning.

CAUTION:

- Do not immerse the coffee maker, or the power cord with plug into water or any liquids
- Clean the housing and keep warm plate with a clean, damp cloth.

CAUTION: Do not use abrasive pads or alcohol.

• Remove the carafe permanent filter and the filter basket from the coffee maker.

CAUTION: The carafe is dishwasher-safe. Wash carafe, carafe lid filter basket and permanent filter in hot, soapy water. Rinse and dry.

• Use baking soda or mild cleaning agent to remove stains on the carafe . If stains are hard to remove, fill carafe with hot water and add 2 tablespoons of dishwasher detergent. Wash and rinse after leaving water with detergent in carafe overnight.

• Ensure all parts are completely dry after washing and before use.

NOTE: Do not dry inside of water tank with a cloth, as lint may remain.

• After cleaning, reassemble coffee maker.

• After cleaning process is complete the clean indicator/button goes off. Fill water tank with clean water and run one brewing cycle to rinse the coffee maker.

• Change the charcoal filter Reinsert the charcoal filter to the coffee maker

NOTE: You can use the cleaning function before reaching 60 cycles (especially if the water hardness is above normal). Press and hold clean indicator/ for 3 seconds.

NOTE: The Cleaning Process takes 60 minutes to complete. You cannot cancel the cleaning process before it is complete. Unplugging the machine only delays the cleaning process.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Coffee leaks around filter basket /drip stop valve overflows	Filter basket is not mounted correctly or not tightened sufficiently There are coffee grounds on the edge of filter Coffee is ground too finely. This will clog the filter When using drip stop valve function, hot water continues to flow into filter basket and may overflow if carafe is not returned to keep warm plate within 30 seconds	Insert filter basket correctly Clean around the filter Clean the filter. Use another type of coffee Make sure carafe is fully seated on keep warm plate or returned to keep warm plate within 30 seconds when using drip stop valve function
Coffee maker does not brew or heat	Power cord is not firmly plugged into a power outlet	Insert power plug into power outlet
Water does not run through	No water in the water tank The filter is blocked or coffee grounds are too fine or tamped down too hard	Fill the water tank Clean the filter and try coarser coffee
Water runs through too quickly	Coffee grounds too coarse	Try finer coffee
Lots of water on coffee grounds	Insufficient quantity of ground coffee	Increase quantity of ground
3 beeps sound	Prog was pressed before clock time was set auto was pressed while no program was stored TSB was pressed before brew cycle was complete	Set clock time, then set the program Set the program first. Wait until brew cycle is complete and 2 beeps sound