



DOLBY SOUNDBAR WITH WIRELESS SUBWOOFER

(2.1CH, 180W)

KASBD180HA

SAFETY & WARNINGS

Attention

 
- To reduce the risk of electronic shock or fire, do not remove the cabinet cover. In the case of maintenance or repairs, contact [help.kogan.com](https://www.help.kogan.com) for all assistance. Do not attempt to make repairs without authorisation.
- Do not operate this product in extreme temperatures, direct sunlight, or wet environments. Do not place the unit in a location where the exposure to these environments is likely to occur.
- Do not drop or mishandle the product.
- If liquids or foreign debris falls into the unit, disconnect the power and cease use immediately. Do not resume operation until it has been checked by a service professional.





COMPONENTS LIST

- Soundbar unit x 1
- Subwoofer unit x 1
- Remote control x 1
- Power cord x 2
- 3.5mm to 3.5mm cable x 1
- Wall-mounting kit x 1
- User guide x 1

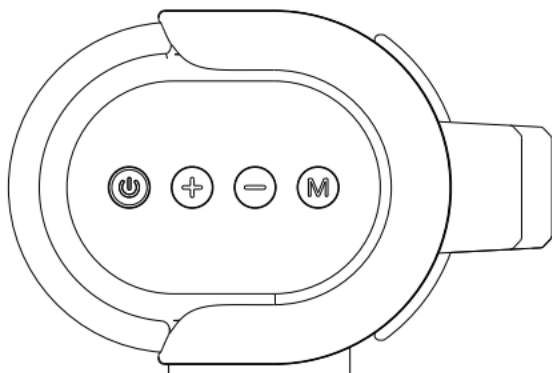
OVERVIEW

Soundbar control panel



-  Standby on/off
-  Increase volume
-  Decrease volume
-  Mode selection

 Connection panel

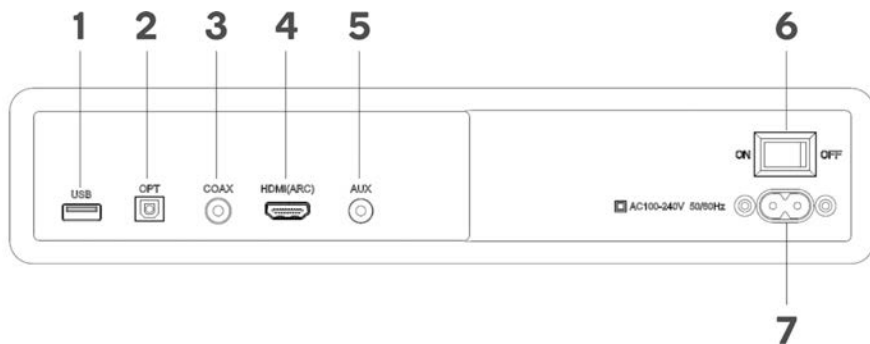

1. HDMI (ARC)
2. OPTICAL
3. USB IN
4. AUX IN
5. COAXIAL
6. ON/OFF
7. AC power in

Modes


LED Display	Mode	Description
Red light	Standby	Press standby button to turn on/off
“BT”	Bluetooth	Available for pairing with bluetooth compatible device such as smartphone or laptop
“USB”	USB input	Use to connect a flash drive for direct MP3 / WAV / FLAC audio playback (FAT32 format, 64GB max)
“AUX”	Auxiliary input	Use to connect compatible devices using a 3.5mm stereo jack cable
“OPT”	Optical input	Use to connect compatible devices using an optical cable*
“COA”	Coaxial input	Use to connect compatible devices using a coaxial cable*
“ARC”	HDMI ARC input	Use to connect compatible devices using an HDMI cable* – compatible with TVs or other devices with ARC outputs







 *not supplied

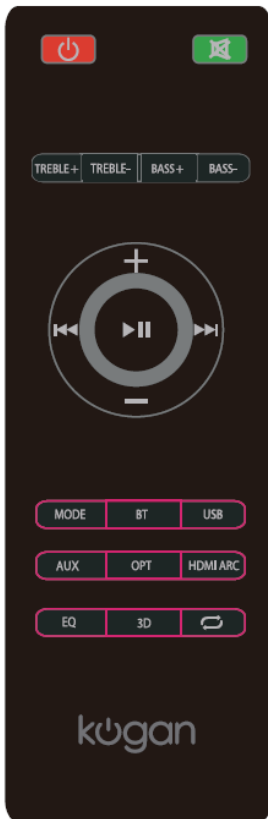Using + / – buttons

+	<p>Press + to increase volume in any mode.</p> <p>In BT or USB modes, long-press + to increase volume and short-press to skip to next track.</p>
-	<p>Press - to decrease volume in any mode.</p> <p>In BT or USB modes, long-press - to decrease volume and short-press to skip to previous track.</p>

Remote Control



Button	Function
	Standby on/off
	Mute volume – press again to unmute
TREBLE +	Increase the treble level
TREBLE –	Decrease the treble level
BASS +	Increase the bass level
BASS –	Decrease the bass level
+	Increase volume level
–	Decrease volume level
	Previous track
	Play/Pause
	Next track
MODE	Toggle between modes
BT	Bluetooth mode, hold button to disconnect or reconnect
OPT	Optical input mode
USB	USB input mode
AUX	Auxiliary input mode
EQ	Toggle EQ presets
ARC	HDMI (ARC) mode
3D	Toggle 3D Surround on/off
	Repeat playback (USB media only)

OPERATION

Wireless subwoofer connection

Notes: The soundbar will come with the subwoofer pre-paired. Follow the below steps if it is not connected, or if you have disconnected and require reconnection.

- Power on both the Soundbar and Subwoofer. The subwoofer's LED light will be flashing continuously if not connected. Set the soundbar to Bluetooth mode ("BT" will show on the LED display).
- Hold the Play/Pause button for at least 3 seconds, until the display shows "PAIR". The subwoofer and soundbar will automatically begin pairing. The first connection can take 10 seconds or more.
- When connected successfully, the soundbar will make a chime sound, and the subwoofer's LED will remain solidly lit.

Input Functions

- **Power on/off:** Press the Power on/off button on the remote control or soundbar control panel to turn the unit on and off.
- **HDMI (ARC):** Connect an HDMI ARC compatible device to the HDMI (ARC) port on the soundbar using an HDMI cable (not supplied). Select HDMI (ARC) mode either by pressing the HDMI (ARC) button on your remote control, or repeatedly pressing the Mode button on the soundbar control panel until "ARC" is displayed on the LED display. Ensure HDMI ARC is selected as the TV's audio output (check your TV's settings), then adjust the volume of soundbar using the soundbar's remote control or control panel.
- **Auxiliary in:** Connect a compatible device using the supplied 3.5mm cable. Select auxiliary mode either by pressing the "AUX" button on your remote control or repeatedly pressing the Mode button on the soundbar control panel until "AUX" is displayed on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume of soundbar using the volume up and volume down buttons on the remote control or soundbar control panel.
- **Optical in:** Connect a compatible device to the optical input on the soundbar using a digital optical cable (not supplied). Select optical mode either by pressing the "OPT" button on your remote control or repeatedly pressing the Mode button on the soundbar control panel until "OPT" is displayed on the LED display. Ensure Optical SPDIF is selected as the TV's audio output, then adjust the volume of the soundbar using the volume up and volume down buttons on the remote control or soundbar control panel.
- **Coaxial in:** Connect a compatible device to the coaxial input on the soundbar using a digital coaxial cable (not supplied). Select coaxial mode by repeatedly pressing the Mode button on the soundbar control panel until "COA" is displayed on the LED

display. Ensure Coaxial is selected as the TV's audio output, then adjust the volume of the soundbar using the volume up and volume down buttons on the remote control or soundbar control panel.

- **Bluetooth:** Press the "BT" button on the remote control or repeatedly pressing the Mode button on the soundbar control panel until BT is shown on the LED display. The LED display will flash to indicate that the soundbar is in Bluetooth pairing mode. Ensure that the device you wish to connect is also in pairing mode and search for "Kogan 180W Dolby SB" in its device list. When the two devices are paired, the LED display on the soundbar will remain solidly lit. The soundbar will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on.

 
Notes: Long-press the BT button on the remote control to disconnect or reconnect the Bluetooth between the phone and the soundbar.

- **USB media mode:** The soundbar is compatible with USB flash drives of up to 64GB (Fat32 format) in size and can play MP3/WAV/FLAC audio files directly. Insert a compatible drive (not supplied) into the USB port on the back of the soundbar and the unit will automatically switch to USB mode and play the first compatible track.

Press the Repeat Playback button on the remote control to toggle between single track repeat ("ONE"), or all track repeat ("ALL") to repeat all songs.


The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

- **Equalizer modes:** The soundbar has three equalizer presets, tailored to complement various styles of audio. Press the EQ button on the remote to cycle between Music ("EQ1"), Movie ("EQ2"), and News ("EQ3") presets.
- **Wall mounting:** The soundbar has two keyhole slots on the back to enable wall mounting using the wall-mounting kit provided.

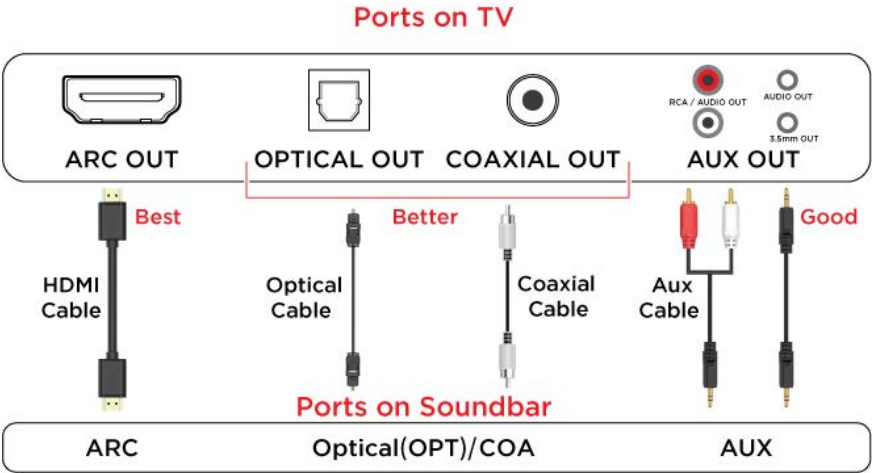

SPECIFICATIONS

Power output	180W
Speaker drivers	<ul style="list-style-type: none">• 58 x 90mm / 25W full range speakers x 4• 8"/ 80W subwoofer x 1
Bluetooth version	5.0 + EDR
Bluetooth range	10m
Connections	<ul style="list-style-type: none">• HDMI (ARC)• Optical• Coaxial• USB 2.0• 3.5mm Auxiliary
Power supply	Built-in AC 100-240V
Dimensions	Soundbar: 904 x 108 x 72mm Subwoofer: 240 x 240 x 420mm

 

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com