



 
2.0 CHANNEL 60W DOLBY SOUNDBAR

KASBD60HA

SAFETY & WARNINGS

- Do not use this product in a high temperature or wet environment.
- To reduce the risk of electronic shock or fire, do not remove the cabinet cover.
- Do not attempt to repair or dismantle the unit on your own. Contact help.Kogan.com for support.
- If small fragments or liquids fall into the product, cease use immediately and contact help.Kogan.com for support.
- Don't install the unit in or near a location where it may be exposed to rain, moisture or other liquids.

 
CONNECTIVITY

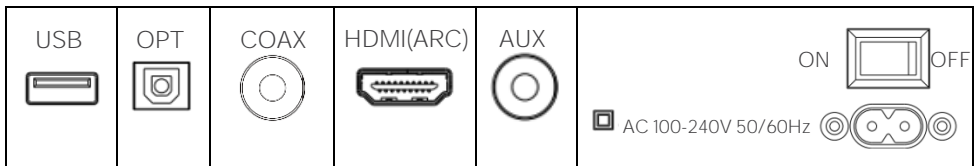





1. USB IN: Use to connect a flash drive for direct MP3/WAV/FLAC playback (FAT32 format and 64GB max).
2. OPTICAL IN: Use to connect compatible devices using an optical cable (not provided).
3. HDMI(ARC): Use to connect compatible devices using a HDMI cable (not provided).
4. COAXIAL IN: Use to connect compatible devices using a coaxial cable (not provided).
5. AUX IN: Use to connect compatible devices using the supplied 3.5mm stereo jack cable.
6. AC IN: Use to connect the AC power supply.

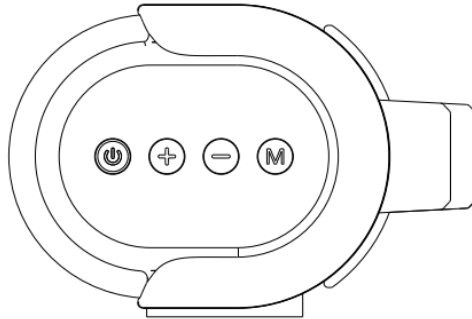 
LED display







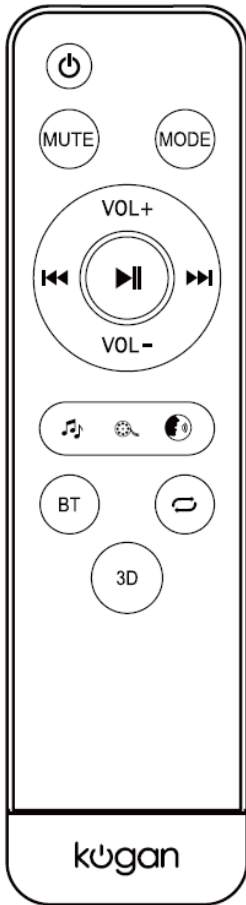

1. Red LED: Standby
2. BT: Bluetooth mode
3. USB: USB media mode
4. AUX: Auxiliary input mode
5. OPT: Optical mode
6. COAX: Coaxial mode
7. ARC: HDMI(ARC) mode



1.		Press to power on/off the soundbar.
2.		Long press to increase volume/Short press to skip to next track(BT/USB model only)
3.		Long press to decrease volume/Short press to skip to previous track(BT/USB model only)
4.		Short press to switch different modes

REMOTE CONTROL



Button	Function
	Power On/Off
MUTE	Mute volume (toggle on/off)
MODE	Cycle through input modes
VOL+	Volume increase
VOL-	Volume decrease
	Skip to previous (Bluetooth/USB mode only)
	Pause/Play
	Skip to next (Bluetooth/USB mode only)
	EQ preset 1: Music optimisation
	EQ preset 2: Movie optimisation
	EQ preset 3: News/speaking optimisation
BT	Short press to switch to Bluetooth mode Long press to disconnect Bluetooth connection
	USB playback repeat (Repeat 1 and Repeat all)
3D	3D mode (toggle on/off)

OPERATION

Power ON/OFF: Press the Power button on the remote control or soundbar control panel to turn the unit on and off.

AUX in: Connect a compatible device using the 3.5mm stereo jack cable provided, then press the MODE button on the remote control or soundbar control panel repeatedly until AUX is displayed on the LED display. Ensure the connected device is producing an audio signal, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

Bluetooth: Press the BT button on the remote control or repeatedly pressing the MODE button on the soundbar control panel until BT is shown on the LED display. The LED display will flash to indicate that the soundbar is in Bluetooth pairing mode. Ensure that the device you wish to connect is also in pairing mode and search for 'Kogan 60W Dolby SB' in its device list. When the two devices are paired, the LED display on the soundbar will stop flashing and remain constant. (The soundbar will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on.)

USB media mode: The soundbar is compatible with USB flash drives of up to 64GB in size and can play MP3/WAV/FLAC audio files directly. Simply insert a compatible drive into the USB port on the back of the soundbar and the unit will automatically switch to USB mode and play the first compatible track.

USB repeat mode (accessed via the remote control) enables single track repeat (press once) and all track repeat (press twice).

The media player also has a memory function that will recall and continue from the last-played point when a USB flash drive that has previously been used with the soundbar is reinserted.

HDMI(ARC): Connect a HDMI ARC compatible device to the HDMI ARC port on the soundbar using a standard HDMI cable (not supplied), then press the MODE button on the remote control or soundbar control panel repeatedly until ARC is displayed on the LED display. Ensure HDMI ARC is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

Optical in: Connect a compatible device to the OPTICAL port on the soundbar using a digital optical cable (not supplied), then press the MODE button on the remote control or soundbar control panel repeatedly until OPT is displayed on the LED display. Ensure Optical SPDIF is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

Coaxial in: Connect a compatible device to the COAXIAL input on the soundbar using a digital coaxial cable (not supplied), select COAX mode by repeatedly pressing the MODE button on the soundbar control panel until COA is displayed on the LED display. Ensure coaxial or external device is selected as the TV's audio output, then adjust the volume of the soundbar using the Volume up and Volume down buttons on the remote control or soundbar control panel.

Equalizer modes: The soundbar has 3 equalizer presents, tailored to complement various styles of music. Press the EQ button on the remote to choose between Music (EQ1), Movie (EQ2), News (EQ3).

Wall mounting: The soundbar has two keyhole slots on the back to enable wall mounting, using the fixings provided or a compatible soundbar bracket (not supplied).

SPECIFICATIONS

Audio output	60W RMS
Speaker drivers	4 x 2.25" 15W
Bluetooth version	5.3
Bluetooth range	Up to 10m
Connection	USB, OPTICAL, COAXIAL HDMI(ARC), AUX (3.5mm), AC IN
Power supply	100-240V
Dimensions	904 x 108 x 72mm

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com