



# QUICK START



[poly.com/support/ata-402](https://poly.com/support/ata-402)



**HP EU**  
HP Deutschland, GmbH, HQ-Technical Regulations  
Schickardstr. 32, 71025 Boeblingen, Germany

**HP Inc UK Ltd.**  
Regulatory Enquiries, Earley West,  
300 Thames Valley Park Drive,  
Reading, RG6 1PT, England




© 2023 Poly. All trademarks are the property of their respective owners.



1725-88162-001A 06/23

RMN: Poly ATA 402

## CONTENTS

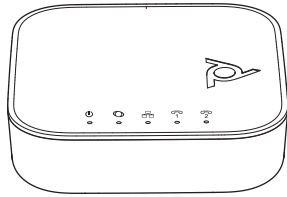

Poly ATA 402



Power Adapter



Ethernet Network Cable

## YOU WILL NEED

- Touch-tone phone
- Active Internet connection
- Access to the Internet via an Ethernet port on your router or modem
- (Optional) Internet phone service subscription
- (Optional) To wall-mount the ATA 402 device, two 5 mm (3/16 in.) screws and anchors (not supplied)

## LED



Off: No Power  
Solid green: Powered on and working  
Flashing green: Searching for a DHCP IP address  
Flashing orange: Upgrading (Do not unplug power.)  
Solid red: Not operational



Flashing green (fast blinking): Data activity on the LAN Ethernet port



Flashing green (fast blinking): Data activity on the PC Ethernet port



Off: Port service not available  
Solid green: Phone ready (standby)  
Flashing green: Phone in use





## YOU WILL NEED

- Touch-tone phone
- Active Internet connection
- Access to the Internet via an Ethernet port on your router or modem
- (Optional) Internet phone service subscription
- (Optional) To wall-mount the ATA 402 device, two 5 mm (3/16 in.) screws and anchors (not supplied)

## ATA system web interface

1. From a phone attached to the ATA device, dial \*\*\* to access the ATA config attendant.
2. Choose 1 to hear the IP address of the ATA device.
3. Enter the ATA device IP address in a local PC web browser.
4. When prompted, enter **admin** for the user name and **admin** for the password.

## CABLING

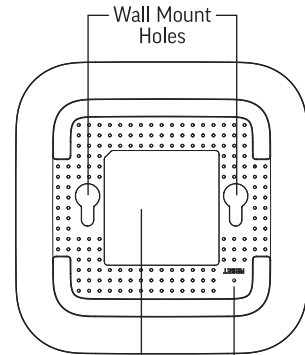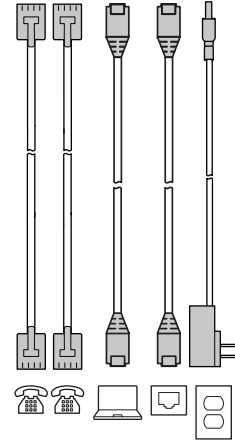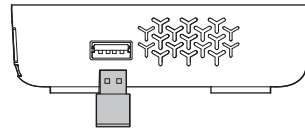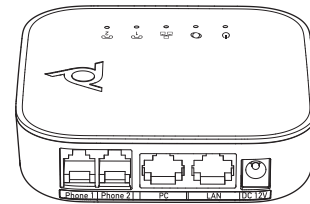

Wall Mount Holes  
Equipment Markings  
Reset Markings