soundcore

User Manual

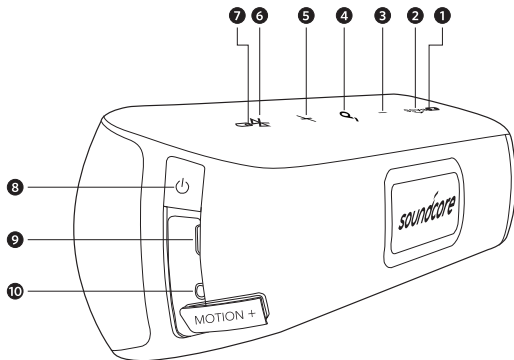Soundcore Motion+

EN Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Soundcore Motion+ can be immersed in water up to 1m for up to 30 minutes.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Do not use any corrosive cleaner / oil to clean.

What's Included
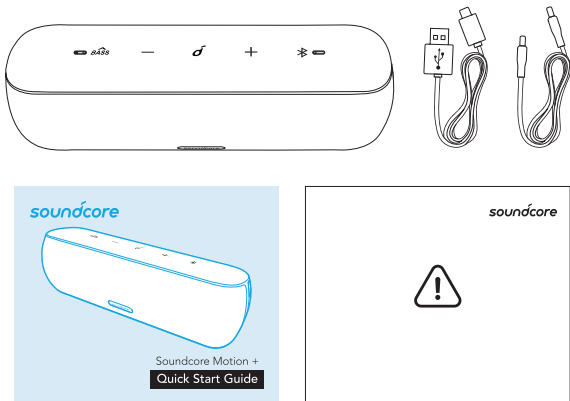
At a Glance

❶ Bass Indicator

Bass indicator color	White

❷ Bass Button

❸ Volume - Button

❹ Multi-function Button

❺ Volume + Button

❻ Bluetooth Button

❼ Bluetooth Indicator

Bluetooth indicator color	Blue / White

❽ Power Button / Power Indicator

Power indicator color	Red / White

❾ USB Type C Port

❿ 3.5mm Audio Input Port

Using Your Soundcore Motion+
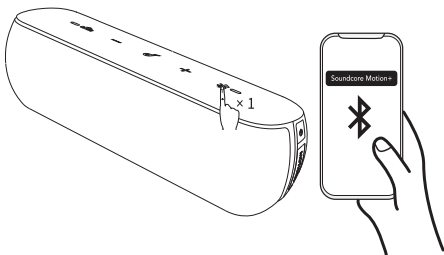
1. Turn On / Off
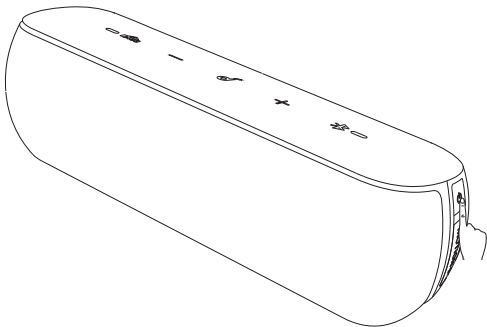
ON	Press once
OFF	Press and hold for 2 seconds

Soundcore Motion+ is equipped with High-Resolution Audio. This specialty gives the speaker a better sound quality by referring to digital processes that allow playback of music using higher sampling rates.

Note: Soundcore Motion+ supports Qualcomm® aptX™.

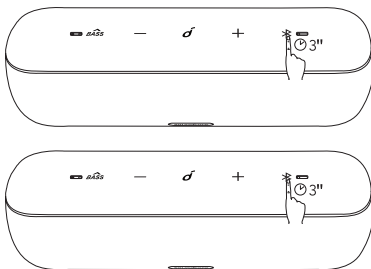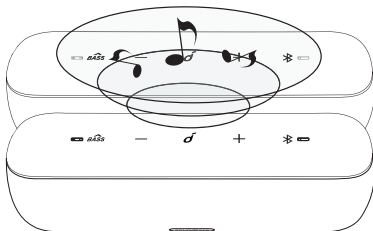|		
-☼-	Slowly Flashing Blue (Fade in and out)	Bluetooth Pairing Mode
		Note: starts to connect to previous connected mobile device when speaker is turned on.
●	Solid Blue	Connected to a device

👆 3″ Enter True Wireless Stereo Group Mode / Disconnect True Wireless Stereo	
⚪ Slow Flashing White	True Wireless Stereo Group Mode
⚪ Solid White（Secondary speaker） 🔵 Solid Blue（Primary speaker）	Connected to True Wireless Stereo

💡 With True Wireless Stereo technology, you can pair your Soundcore Motion+ with another Soundcore Motion+ to explore the best sound effects with left and right sound channels separated on both speakers.

Music

👆 ×1	Play / Pause
👆 ×2	Play Next Song
👆 ×3	Play Previous Song
👆 ×1	Press to turn Bass on

	Press once to activate bass Note: Press again to switch back to Normal Equalizer.
	Activate Siri / Other Voice Control Software
	Volume Up / Down

Mobile phone

	Answer Call / End Call
	Reject Call / Switch between a call on hold and an active call
	End current call and answer incoming call / End current call and switch to call on hold
	Switch audio source between Speaker and Phone

| ● | Solid Blue | On a Call |
| ⌀ | Flashing Blue | Incoming Call |

When turned on, Soundcore Motion+ will automatically connect to the last connected device if available. If not, press the Bluetooth button to activate pairing mode.

To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.

Having connection problems? Remove Soundcore Motion+ from your device's Bluetooth history and ensure it's less than 3 feet away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.

AUX

↑ AUX
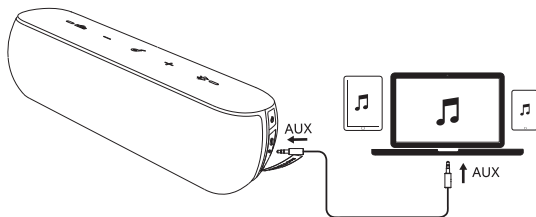
Plugging in an audio cable will automatically switch to AUX mode.
When using AUX mode, control audio playback via the connected
device.

Charging your Soundcore Motion+
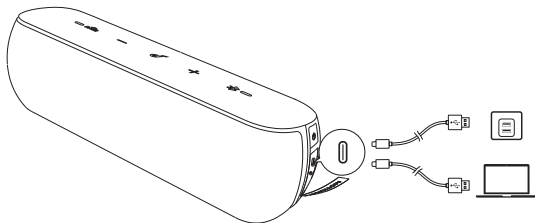
⚡ Slow Flashing Red	Low Battery
🔴 Solid Red	Charging
Off	Fully Charged

> 💡 Use the included USB cable to charge your Soundcore Motion+ and make sure it is fully charged before its first use.
>
> USB type C cable only supports charge in, it does not support charge out.
>
> Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
>
> When not in use, store your speaker in a cool place.

Specifications

> 💡 Specifications are subject to change without notice.

Input: 5 V ⎓ 2 A
Audio output: 30 W
Battery capacity : max.6700mAh
Charging time : Approximately 4 hours(When power is off and the adapter must be at least 5V/2A)
Playtime (varies by volume level and music content): 12 hours
Size: 257 x 79 x 81 mm / 10.1 x 3.1 x 3.2 inch
Weight (without packaging): 1050 g / 37 oz
Bluetooth version: V 5.0
Bluetooth range: 30m/99ft
Sound Frequency Range: 50Hz~40kHz

Soundcore App

Download on the App Store

Apple and the Apple logo are trademarks of Apple Inc.

GET IT ON Google Play

Google Play and the Google Play logo are trademarks of Google Inc.