



MAKE A DIFFERENCE

Rear Bumper

BXG.8283

(1) Contents:



Main Body



Driver Side



Passenger Side

Mounting Brackets

Qty	Part Name	Size(mm)	Picture
12	Hex Bolts	M12*35	
12	Split Lock Washer	D12	
24	Flat Washer	M12*30*2	
12	Hex Nuts	M12	
8	Button Head Socket Cap Bolts Screws	M6*16	
8	Button Head Socket Cap Bolts Screws	M4*16	
1	L-Wrench	M4	
4	Sensor Brackets		

(2) Tools required:

- a. Drive Socket Ratchet Wrench;
- b. 10mm, 19mm Wrench;
- c. 19mm Shallow Socket;
- d. 4mm Hex Bit Socket;

(3) Installation time:

About 1 hour, 1-2 people may be needed. Installation time may differ according to your mechanical skill level.

(PLEASE VERIFY ALL PARTS ARE PRESENT AND READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION!)

To view the electronic version (BXG.8283), please scan the QR code.



(4) Installation instruction:

Step 1: First, remove the original car rear bumper radar harness. Use a 10mm wrench to unscrew the screws behind the original car bracket, and then unplug the harness connector.



Step 2: Insert the plug of the original car radar harness into the corresponding radar socket, secure the radar to the rear bumper using the sensor bracket, and fasten it with M4*16 screws to prevent shaking or damage during driving. Put the trailer connector into the bumper.



We provide instructions for two installation methods, please choose one method to install according to the situation of your car.

With the factory tow hook

Step 3: Before installing our product, ensure that the vehicle is parked in a safe and level location, and remove the original car rear bumper.



Step 4: It is recommended to install the bumper with assistance. Lift the bumper, align it with the original vehicle mounting holes, and secure it using M12*35 screws with washers and nuts. Adjust the gap from the vehicle and tighten the screws.




Without the factory tow hook

Step 5: Before installing our product, ensure that the vehicle is parked in a safe and level location, and remove the original car rear bumper.



Step 6: Next, the mounting brackets need to be mounted on the bumper. Use M12*35 screws to assemble them. Repeat the same procedure on the other side.

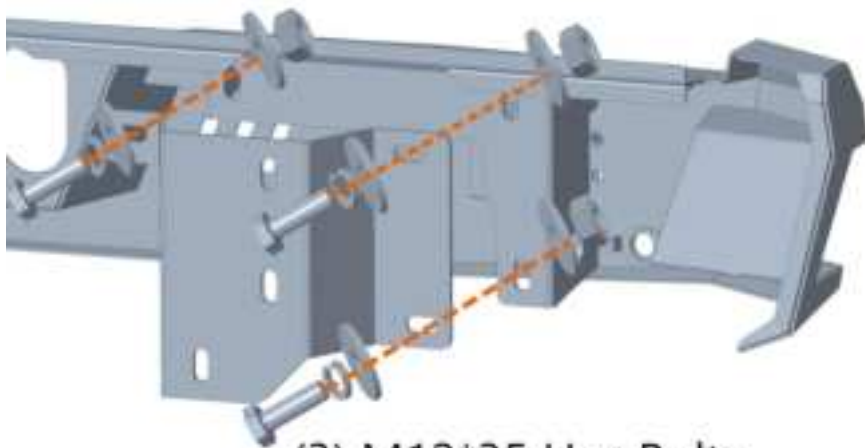


- (3) M12*35 Hex Bolts
- (3) D12 Split Lock Washer
- (6) M12*30*2 Flat Washer
- (3) M12 Hex Nuts



Step 7: It is recommended to install the bumper with assistance. Lift the bumper, align it with the original vehicle mounting holes, and secure it using M12*35 screws with washers and nuts. Adjust the gap from the vehicle and tighten the screws.



Step 8: Finally, install the provided square lights into the bumper. Use M6*16 black screws for the installation.

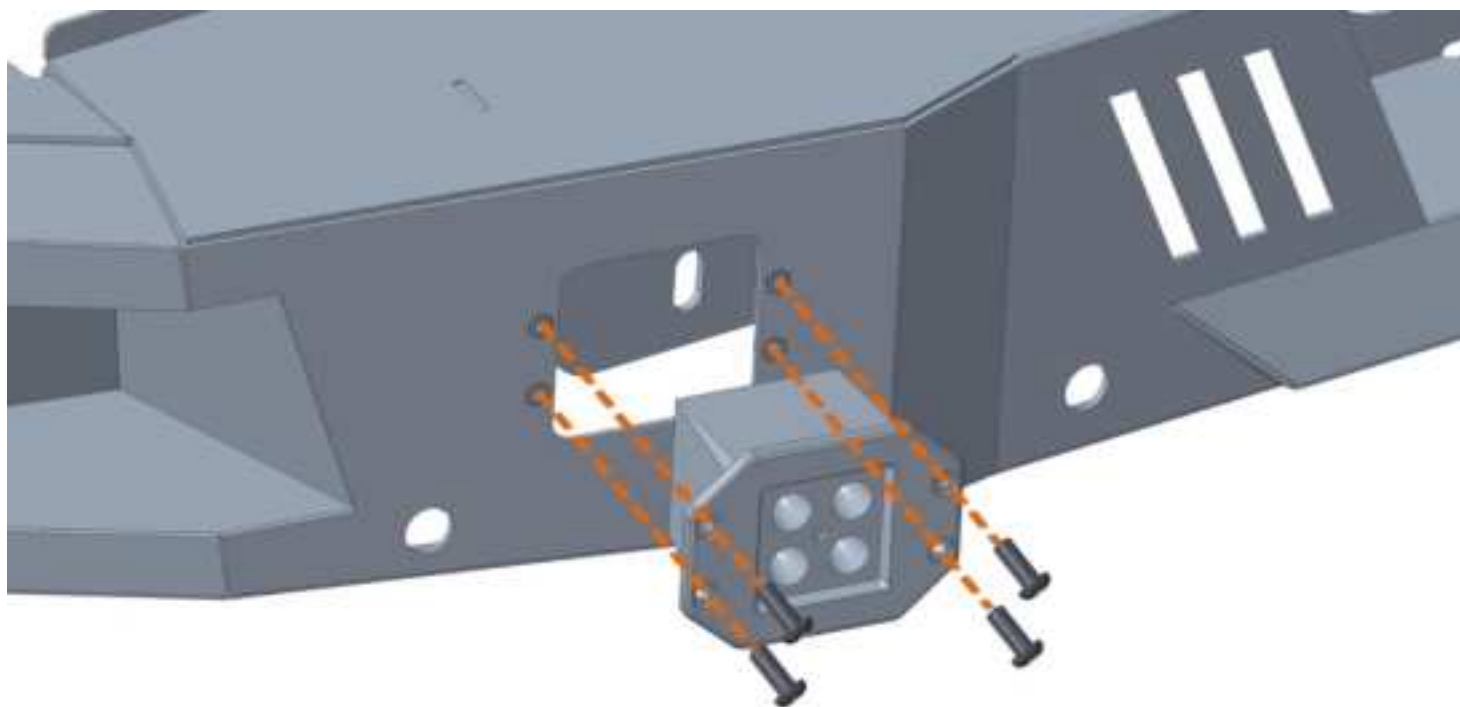

(4) Button Head Socket Cap Bolts Screws (M6*16)

Step 9:

The installation is complete. We hope you enjoy a wonderful off-road life with this quality Hooke Road product!



Attention:

1.The product parts in this instruction may differ slightly from the actual product contents but generally does not affect the installation of the product.

2.Please feel free to contact your distributor if you have any kind of question about your purchase.

Google Hooke Road to find your parts.

Feel Free To Share Your Vehicle [@HookeRoad4x4](#)
With The Hashtag #hookeroad If You'd Like

